



Samsung Gravity TXT microSD Card Replacement

Use this guide to replace the microSD memory card.

Written By: Mounir Karmada





TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery




- Pry the back cover off with a plastic opening tool, or your fingernail, in the indentation on the bottom of the device.

Step 2



- Lift the back cover away from the main body of the phone.

Step 3

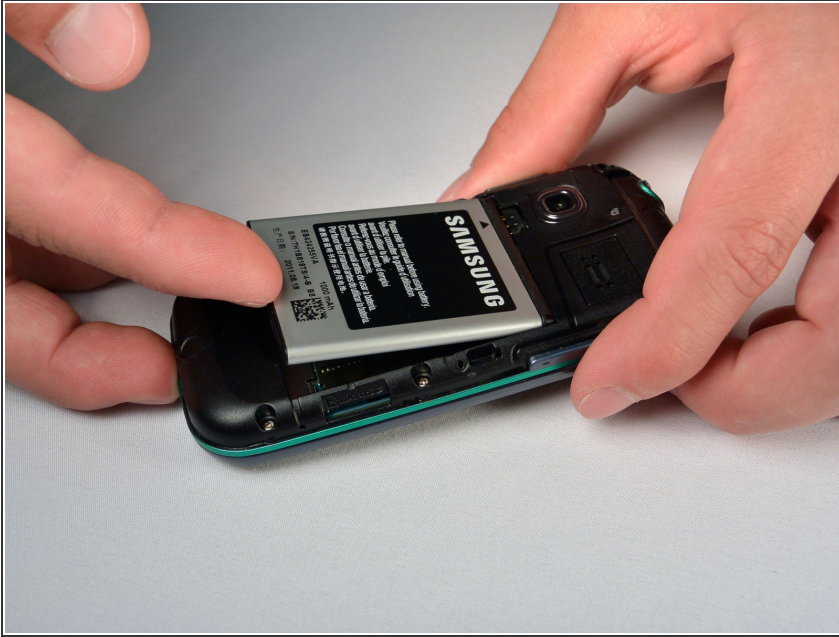

- Insert your finger in the groove below the battery.
 - Press the battery toward the audio jack while lifting upward and away from the phone.
- ☑ Remember to place the battery back with the copper contacts on the battery lined up with those on the phone.

Step 4 — microSD Card



- Using your fingernail, push the microSD card slightly deeper into the slot, until you hear a click.
- ⓘ The removal of the battery is not required for this operation; therefore, step 3 can be skipped if just replacing the microSD card.
- After the click, release the microSD card to allow it to pop out.
 - Remove the microSD card from its slot
- ☑ When placing the microSD card back in the phone, make sure the card clicks in place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-03 11:39:33 AM.